

ApexMaker

ApexMaker Curing Station Instructions

*This curing station has no heating function.


Outline of curing station

blackout door

touchpad



01 Starting the Power

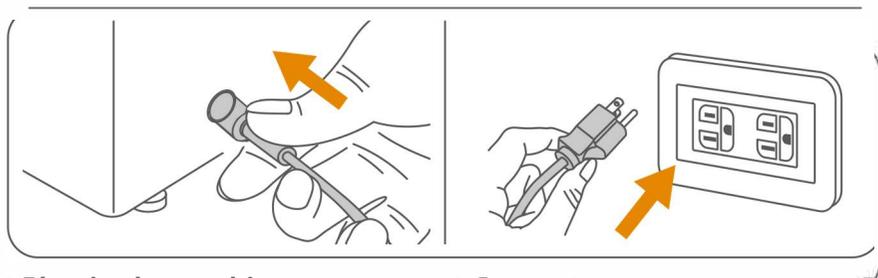


Plug in the machine

Plug the power cord into the machine interface.

Connect power

Plug it into an outlet and you're ready to use. To turn off the power, remove the plug.


02 Set the curing time

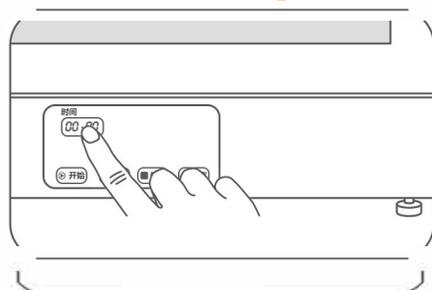

Curing time setting


Click the time and select the curing time in the pop-up interface.

03 Curing Station starts working

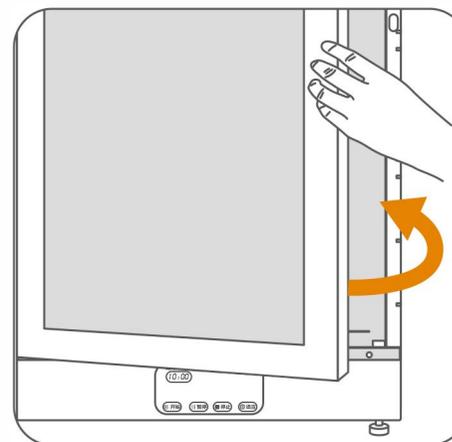

Close the blackout door of the curing machine tightly, click the Start button, The machine can begin to operate.

*The curing machine displays the temperature, but there is no heating function

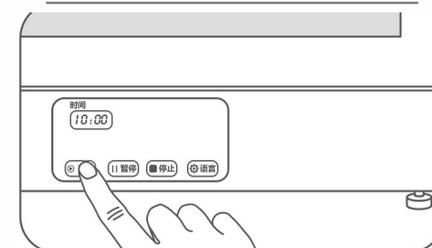

Attention



- The curing machine needs to be sure that the door is closed tightly before it can start operating
- Do not look directly at the light source of the curing machine without closing the blackout door to avoid eye damage
- Children over 8 years of age and persons with physical and behavioral disabilities should use this product under the guidance of a legal guardian to ensure that users are aware of the risks involved. Children are not allowed to use this product without a guardian
- Do not clean or maintain this product without a legal guardian

Maintenance

If you need to clean the appearance, please wipe with alcohol, do not use oily or corrosive liquid wipe.